Operation Manual PFM Flex 4

The new and unique PFM *FLEX* Concept comprises 4 different Instruments for Flow and Pressure measurements. From the simplest Flex 1 to the most advanced Flex 4.

The differences are based upon the functions in respective instrument.

Below is a summary of the available functions of the alternative Flex instruments.

	F	LEX Instrum	ent alternativ	/e
	<u>FLEX 1</u>	<u>FLEX 2</u>	<u>FLEX 3</u>	<u>FLEX 4</u>
Function				
-Measuring Method 1 & 2	X	x	х	Х
-Valve Library	X	x	х	Х
-Save		x	х	Х
-Switchmode		x	х	Х
-Graphical Presentation			Х	Х
-Set-Value			Х	Х
-Media				Х
-Energy & Power (2 temp meas	urements)			Х
-Log Function				Х
-Scope Presentation				X

Upgrading from *FLEX 1* to *FLEX 2* or to *FLEX 3* or from *FLEX 2* to *FLEX 3* is easily done by changing a memory stick in Hand terminal. Changing to *FLEX 4* requires service at Smart Balancing Instruments workshop. Please contact your supplier.

Table of contents

1.	Product description	
	1.1 General description	page 3
	1.2 Unpacking	page 4
	1.3 Technical data	page 5
2.	Handling	page 6
3.	Preparations – Measuring	page 7
	3.1 Measuring Sensor	page 7
	3.2 Hand-Terminal	page 8
	3.2.1 Settings	page 10
	3.2.1.1 Appearance	page 10
	3.2.1.2 Browser	page 10
	3.2.1.3 Valve Data	page 11
	3.2.1.4 License	page 11
	3.2.2 Valve Data	page 12
	3.2.3 Media	page 13
	3.2.4 Function	page 14
	3.2.4.1 Main	page 14
	3.2.4.2 Offset Calibration	page 15
	3.2.4.3 Service	page 15
4.	Measuring	page 16
	4.1 Measuring Method 1	page 17
	Scope, Power & Energy	page 22
	4.2 Measuring Method 2	page 24
5.	Transferring data from	
	Hand Terminal to PC	page 26
	Set Value & Balancing Projects	page 27
6.	Using several Measuring Sensors	page 39
-	Switchmode	page 40
1.	Using several Hand-Terminals	page 43
8.	Accessories	page 44
9.	Upgrading	page 44
10		page 44
11	.Warranty & Service	page 45



1. Product description

1.1 General description

PFM Flex 4 (PFM = Pressure Flow Meter) is an instrument for pressure- and flow measurements. The intended usage is checkingand documentation of water flow in heating- and cooling constructions. PFM Flex 4 consists mainly of a Measuring Sensor and a Hand Terminal (PPC) including the BalanceFlex program software. The Sensor measures differential pressure as well as temperature and communicates via Bluetooth with the Hand Terminal.

The Hand Terminal software comprises data of most of the existing balancing valves on the market. From the Hand terminal list of Balancing Valves, the operator choose the actual one (manufacture, model, dimension, position (giving the corresponding KV). This valve data together with measured DP are the basics for calculation of the correct flow which will be displayed on the Hand terminal screen.

Measurement readings can be shown in a graphical form in the Hand Terminal. Readings of balanced values with respective valve data can be saved and later shown on the Hand Terminal screen or even on a PC screen that is connected to the Hand Terminal. The Hand Terminal has a rechargeable battery, type Lithium Ion as well as a system battery. Charging of Hand Terminal is done via enclosed charger.

The PFM Flex 4 includes more functions than just commissioning items. Media and Log functions, on-line graphical display of DP, temperatures and flow. Temperature difference (DT) can be measured or given manually to on-line graphic display of Power capacity and Energy amount carried by a particular flow. Flex 4 can be used at heat pump and solar installations, error tracing, at cooling and air conditioning systems.

The Sensor has two connections for hoses that are to be connected over the measuring object. There is also a handle device on the Sensor for opening and closing of the measuring cell.

The Sensor has a rechargeable battery pack of 6.600 mAh. Charging is done via the enclosed battery charger.



Product description, cont'd

1.2 Unpacking.

A complete PFM Flex 4 consists of:

- 1. Carrying case
- 2. Measuring Sensor
- 3. Charger to Sensor
- 4. 2 pcs Measuring hoses.
- 5. 2 pcs Measuring needles
- 6. Allen keys
- 7. Manual
- 8. CD with Manual and software for Balancing Measuring program, Valve browser, Report Viewer and links to useful programs
- 9. Calibration protocol
- 10. Hand Terminal with active license for Flex 4
- 11. Charger for Hand Terminal
- 12. Data communication cable; Hand Terminal – PC.
- 13. 2pcs SBIT temperature probes







Product description, cont'd

1.3 Technical data, *PFM FLEX Concept.*

Measurement Range

- Total Pressure: max 2500kPa
- Differential Pressure: 0-1000kPa.
- Recommended pressure range: 3 200kPa
- Static pressure: <1000kPa
- Ambient temp: -30 +40℃
- System Temp T1: -30 +120℃
- System Temp T2: -30 +120℃

Measurement deviation

- Differential Pressure: <0,1% of Full Scale
- Flow: as for differential pressure + valve deviation
- Temperature: <0,2℃

Battery capacity, operating and charge time

Hand Terminal

- Battery Capacity: 1200mAh. Extended: 3900mAh. Optional.
- Operating Time: 8 hours. Extended: 24 hours, continuous duty.
- Charging time: 1,4 hours. Extended: 4,5 hours

Sensor:

- Battery Capacity: 6.600mAh
- Operating Time: 35 hours, continuous duty
- Charging Time: 6 hours

Ambient temperature for the instrument

- During operation and charging: $0-40^{\circ}\!\!\!\mathrm{C}$
- During storage: -20° C 60° C

HumidityAmbient humidity: max 90%RHWeightSensor: 540grComplete Case: 2,8kgOpen Space Range:>200m. >500m with anterna (option)IP-class Sensor: IP65



Optional: <2000kPa

2. Handling

The instrument PFM Flex 4 is robust and easy to handle but should not be exposed to careless usage.

Avoid exposing the instrument to temperatures below zero degrees C if there is water in the Sensor.

To empty the Sensor just open the Sensor valve (by-pass position) and shake the Sensor.

If the instrument is not being used for a period, we recommend overhaul charging of Sensor and Hand Terminal.





3. Preparations - Measuring

3.1 Measuring Sensor.

Start the Sensor by pressing the *On/Off* button. A green led indicates that the Sensor with its' computer as well as Bluetooth transmitter is "on". Bluetooth connection to a Bluetooth object such as Handterminal is indicated by the blue led lighting.

Before connecting the Sensor to a flow system or balancing valve, an Offset calibration must be performed. See 3.2.4.2. Page 15.

Connect hoses to the Sensor's two pressure ports. Blue to blue and red to red. Connect measuring needles to hoses. Connect needles to the pressure outlets of the measuring object. Needle with red hose to pressure outlet with the higher pressure (often red marked) and needle with blue hose to the other (blue marked) outlet. After completed measurements, the Sensor is put "off" by pressing the *On/Off* button.

If the Sensor by any reason would jam or if it is not possible to come in contact with it, the *Reset* function is to be used. Push the *Reset* button to perform a soft reset.





Preparations - Measuring, cont'd

3.2 Hand Terminal.

Before doing the settings you must start the Hand Terminal by pressing the *On/Off* button on the upper right of the Pda front. On the upper left there is a blue light which indicates the Bluetooth function of the Hand Terminal. Close to the right, there is another lamp which lights red/orange, when the Hand Terminal is being charged. Please also see Technical Data, Power Supply, Hand Terminal.

The Start Menu of the Hand Terminal is now visible. At the upper right corner of the Hand Terminal there is a terminal pen. This pen facilitates when doing menu choices on the screen.



Preparations - Measuring, cont'd

Tap "Start" or the MS symbol at the upper left to scroll down the program list. In the list, you will find "BalanceFlex". Tap "BalanceFlex" in order to start the BalanceFlex measuring program. (For info regarding other programs and functions, please see the enclosed HP Manual). When starting the BalanceFlex program, the

program browser automatically starts to search for objects (Measuring Sensors) with Bluetooth transmission. Please also see "Browser", 3.2.1.2, page 10.

The main menu of the BalanceFlex measuring program is now displayed. Se picture to the right. After a few seconds, short and rising tones are heard. These tone signals inform that contact is established between the Sensor and the Hand Terminal via the Bluetooth function. The contact is also confirmed when the battery indicator turns green in accordance with the Sensor's battery status, as well as the serial number of the Sensor is displayed above the battery indicator. (If battery level is low, the Sensor should be charged; see Technical data, Power supply, Sensor). The serial number of the Sensor is also presented on a label at the back side of the Sensor.

Before choosing Measuring Method (represented by "1" resp "2" below "Measuring Method"), Settings,(for example units) could be performed.



Preparations - Measuring, cont'd

3.2.1 Settings.

Settings comprises 4 sub-menus (tabs). Appearance, Browser, Valve Data and License. Normally it is only Appearance and Valve Data that is to be set.

3.2.1.1 Appearance.

Tap Appearance.

Five settings are to be done. *Language*, and unit choices for *DiffPressure*, *Flow*, *Static Pressure* and *Temperature*. Each setting is represented by a scroll down box. Tap the arrow and the available choices are displayed. Tap your choice and the scroll down box will close and display your unit choice. Any unit could also be changed during measuring. By using the icons at the bottom of the window.

3.2.1.2 Browser

This tab is only used when utilizing the advantage of communication with alternative Measuring Sensors.

See "6. Using several Measuring Sensors".







Preparations - Measuring, cont'd

3.2.1.3 Valve Data.

Under this tab, balancing valve measurements, are given a symbol or a denomination. The symbol will automatically be linked to the measurements that are saved. The first measurement that is performed and saved in the Hand Terminal will be allotted to the symbol chosen and completed with a current number. For instance, if you choose "rv", the first stored measurement is allotted the name "rv0", the second measurement "rv1" etc See more under "Measuring", Save.

Choice of symbol can be made by two alternative ways. Either by choosing one of the existing symbols, by tapping on one of the displayed symbols (the chosen symbol becomes blue marked). Tap on OK in the upper right corner, for leaving this sub-menu. You may also chose your own symbol by tapping on Add Symbol. By tapping on Add Symbol, a keyboard will appear. Create your own symbol by tapping on the letters and figures on the keyboard. When a new symbol is entered, tap on OK and the keyboard disappears. The symbol you just created is now added to the list with the standard symbols. Tap on this symbol as above and then OK for leaving this sub-menu

3.2.1.4 License.

Here you find the serial number of the Hand Terminal and also the license number associated with BalanceFlex program. Tap OK at the upper right corner to return to the Main Menu.





Preparations - Measuring, cont'd

3.2.2 Valve Data.

Tap at Valve Data at Main Menu. The Valve Data screen shows all stored balancing valve measurements. For example, if "rv" has been chosen as symbol and five measurements have been completed and stored, the rv0, rv1,rv2, rv3 and rv4 icons will be seen on the screen. By tapping on any of the four "rv" icons the measurement data is displayed for the chosen valve.

Down to the right there is a < Back icon. Tap "< Back" to return to the measurement list.

Tap and hold the terminal-pen at a specific measurement and then tap delete, to remove a measurement from the Valve Data list.

Tap OK at the upper right corner of the display, to return to the main menu.







Preparations - Measuring, cont'd

3.2.3 Media Flowfactor.

Media and associated correction factors are specific to manufacturer data, at the present water is set by default.

When available, tap the arrow to the right, and choose the media from the dropdown box. The "General" notification include water and some standard media and concentrations. Which can be used to calculate and graphical present Power capacity and energy amount for respective media and flow.

The Flowfactor correction concerns particular valve manufacturers.

Media menu also include two different temperature presentations.

- T₁ SBI temperature probe (SBIT)
- T₂ SBI temperature probe (SBIT)

With the SBIT probe, the flow system temperature can be measured at two different measuring points simultaneously.

The Sensor is prepared for the T1 and T2 and the connectors are placed at the left side of the sensor. The DT can be set manually to for instance 1 degree C. Which enables Power and Energy presentations without any actual temperature measurement.



Preparations - Measuring, cont'd

3.2.4 Function

This menu consists of three tabs: Main, Offset calibration and Service.

3.2.4.1 Main

Under Main you will find Function Test. The Sensor Data as well as the battery status of the Sensor is presented here. Sensor battery status and "Name" is also displayed in the upper left corner of the Main Menu. See also "Hand Terminal" page 8.

Offset Voltage (mV) informs of the Sensor's reference level (for Service purpose). At the Flex sensor this level is always set to zero, indicated by a blank default value.



Preparations - Measuring, cont'd

3.2.4.2 Offset calibration.

Offset calibration is performed in order to bring a correct measurement of the Static pressure in a flow system. The calibration also brings higher accuracy when measuring diffpressure and flow.

Offset calibration is performed when a Bluetooth connection between the Hand Terminal and the Sensor is established.

The Sensor pressure ports shall be at atmospheric pressure which means that the Sensor shall not be connected to any balancing valve or flow system.

Start calibration by tapping *Start calibration*.

3.2.4.3 Service.

This tab is only available for qualified service personnel.

Tap *OK* to get back to the Main Menu.







4. Measuring

As all functions and settings now are completed, we are prepared for the measuring procedure.

The BalanceFlex program comprises two different measuring methods represented by *1* and *2* just below *Measuring Methods*.

Measuring Method 1 is characterized by a given valve position, the measured differential pressure over a balancing valve and the corresponding flow calculation. Measured values for the chosen valve, manufacturer, type, size, valve position, Kv-value, differential pressure, flow, static pressure and temperature are stored.

Measuring method 2 is characterized by entering a desired flow value to the BalanceFlex program. The Hand Terminal calculates and presents a valve position for achieving the desired flow.

At the lower part of the screen there are a quick reference icons, language, units for DP, Flow and temperature that could be changed even during measuring.



Measuring - cont'd

4.1 Measuring Method 1.

Tap 1 on the Main Menu of the BalanceFlex program. Tap the arrow to the right of the respective areas for *Manufacturer, Model, Size,* and *Position* and make your choices.

Choosing *Position* generates automatically corresponding *Kv*value. Alternatively, choosing *Kv*value generates automatically corresponding *Position* value.

If you want to state *Position* or *Kv*-value with other values then found in the drop-down list, you may use the keyboard. The keyboard icon is found down to the right.

When your choices are done, tap *Continue*.





Measuring - cont'd.

Zeroing

Follow the instructions which means open the sensor valve. Zeroing is now done over the balancing valve or the measuring object. Tap *Continue* and follow the new instruction i.e. close the sensor valve and tap *Continue*.





Measuring - cont'd.

Following the last instructions you should now have the measurement menu visible with all data on display. On top you will see *Flow* which is calculated from the measured differential pressure (seen below *Flow*) and the actual *Position (Kv*value). Static pressure and temperature are measured values. In the areas for *Position* and *Kv* you will find the values that were set in the previous window. If displayed values are acceptable, just tap *Save* (see below).

If you instead want to adjust the valve, turn the valve knob to a new position. Tap the position icon to the right of the "position, and Kv box". Use the scroll down position box to enter a new position value. It is possible to enter position and Kv value using the terminal keyboard. Tap OK and find the new calculated flow.

When the adjustment is completed, tap Save.





Measuring - cont'd

The window *Save as* is now displayed, including the measurement values. In the *Save as*window you may denominate your measurement with other symbols then the ones chosen at "Valve data" menu. (page 12)

Tap the drop-down box and the available standard denominations are displayed as well as the keyboard. With the keyboard you may now choose your own denominations.

Beneath Category you may also make your own choices with the keyboard. Now tap Save and the denominations with valve data and values are stored in the Hand-Terminal. Stored values etc are available from the Main Menu's Valve Data (See Valve Data). If you don't want to save the data and values just tap Cancel and the Measuring-window is displayed again. After tapping "Save" the Measuring window will also be displayed and you may now start another balancing procedure as above. If the next balancing is done over another type of valve you must "inform" the Hand-Terminal accordingly by tapping OK followed by Measuring method 1. Here you chose valve manufacturer etc as earlier.





Measuring - cont'd

BalanceFlex Measuring program also comprises graphical presentation of the actual measurement. At the Measuring window there are two short-cut icons which open the graphical presentation.

Above the graph you see the continuously measured differential pressure. The position of the valve is displayed on the x-axis. The corresponding Kv-value on the left y-axis and the flow on the right y-axis. When graphical presentation is opened from the Measuring window, the Kv-value and corresponding position that was stated there will be displayed on the respective axis in the graphical presentation. With measured differential pressure, the flow is calculated and displayed on the right y-axis. If the valve knob is adjusted to a new position, the differential pressure will change. Use the terminal pen to tap and drag the intersection to the new position. Fine tuning can be done with the left/right arrows.

New Kv-value is displayed on the left y-axis and the new calculated flow on the right y-axis.

Tap the "Save Position" icon at upper right corner to Save the new position and flow situation into the measurement menu.

Tap OK at the upper right corner to return to the measurement menu without storing a new position and flow into the measurement menu.

The graphical presentation can be opened without any system DP measurement. Use the terminal keyboard to input Differential pressure values. Valve characteristics is entered from the Choose valve menu.





Scope, Power & Energy

Tap the Scope, Power & Energy icon to the right at the quick reference bar, tap scope. The x-max value can be changed using the terminal keyboard. To get a 1 hour on-line Log with a value taken every second set X-max to 3600.

Balance Measurement	#* 4 × 07:56 ol
Flow,	/h: 1404.923
Posit	tion: 5.70 KV: 3.14
Static pressure, Temperature,	bar: 0.03 , °C; -
Power, W	/att: 1630.90
Stabilize	Save
10280047 MMA, STV DN25, 5.7/3.14	Manual -
a dp ci 🥒 🦉	







Scope, Power & Energy

Tap the Scope, Power & Energy icon to the right at the quick reference bar, tap Power & Energy. Accumulated energy amount during the period is presented at the top right of the Energy Log.

Balance	₩ 4 € 08:05
Measuring Met	bads
🔉 Settings	
🥑 Valve Data	
Media	
Function	Distance of the second
1111	Scope
a dP Fl 🥖 👎	i 📾 🕸 🗇 👘 👘

Balance			4 ok
kWatt 👻	X-max [30	0 sec	•
3.00-			2.13
2.50-			
1.50			
1.00-			
0.50-			
0.00			
-0.50-			
-1.00-			
-2.00-			
00:00:00 00:	01:15 00:02:3	0 00:03:45	
Power Energy			
	-		
TO THE UNLINE	- Internet		
-			





Measuring - cont'd

4.2 Measuring Method 2.

Tap at Measuring Method 2, select manufacturer, model etc in the same manner as at Measuring Method 1. Follow the instructions on the screen and perform the zeroing in the same way as at Measuring Method 1.

When the zeroing is completed, a Flow Calculator pop-up window will appear.

State the desired flow in Enter Flow box by using the keyboard and tap Continue.





Measuring - cont'd

Tap the valve icon to the right of the Position area.

A new Set Position pop-up window is opened.

Adjust the valve to the calculated position which is presented at the Set position pop-up. Check the flow and repeat the procedure until desired flow value is achieved.







5.

Transferring data from Hand Terminal to PC.

Data that has been stored in the Hand Terminal is available under *Valve Data*. Valve Data is easily transferred to PC for further processing as transcription etc. A CD containing, for instance, *Support* is included in each complete PFM Flex 4. The "Support" program package enclose two different programs; *Valve Browser* and *Report Viewer*.

The programs are downloaded from CD to PC as usual i.e. put the CD into the PC disc drive, click at *Support* and follow the instructions. Short cuts are automatically created at the desktop "Report Viewer", "Projects" and "Valve Browser".

A condition for communication between Hand Terminal and PC is that Microsoft ActiveSync is installed in your PC. If not, download the program via *Get Microsoft ActiveSync* from the CD and follow the instructions.

Report Viewer has two windows. To the left there is a list of performed balancing measurements. To the right there is a window where a marked measurement is displayed. The window to the right presents the valve's saved symbol (denomination), date, year and time when the measurement was saved. The valve is specified as manufacturer, model and size. Measuring data is specified as flow, differential pressure, position, KV-value, static pressure and temperature.

The icon for different languages is used for changing the language.

Valve Browser is a graphic based valve display program. Position – KV curves are given for a vast number of valves from different manufacturers.

The program has 3 windows. *Valves*, where manufacturer, model and size is chosen. The graphical presentation of the chosen valve is displayed to the right. A theoretic differential pressure is stated at the upper rim of the graph. By clicking somewhere at the curve, flow and corresponding position and KV is displayed in yellow boxes. Flow at the right y-axis, position on the x-axis and KV at the left y-axis. A position may be saved by clicking *Save to History* and the actual valve settings is listed at the window below the graph.

Positions in the list can be edited and deleted.



Set Value & Balancing Projects

Set-Value function is another example of how the Smart Balancing concept Facilitates commissioning work.

The Set-Value function enables the operator to store all pre-set values of a project into the Handterminal before going out on site. Once out on site, pre-set values are easily displayed in Handterminal and could be compared with measured values.

Pre-Set values are gathered from drawings or lists of a project and could include parameters like Valve ID, Manufacturer, Position and Flow.

Install the support program at your PC and The BalanceFlex program in your Hand Terminal or Smartphone.

The installation of the Support program Creates three icons on the PC desktop.

- 1. Report Viewer
- 2. Projects
- 3. Valve Browser.

Tap on the Report Viewer icon.



200

BT OFF RESET ON/OFF



Set Value & Balancing Projects

@ Report Viewer	
🔲 🕻 🏢 Create Project 🌛 Open Project 🗸 👗 Report 🛓 Print 🏋 Delete 🛛 🦂 🗸 🚺	
Create Project Specify project name Agal OK Cancel	
Done	

Tap on Create Project and designate a Project name. Tap on OK. A Excel report document is opened.



Set Value & Balancing Projects

	Micro	soft Exc	el - Aga	.xls														×
	Arkiv	<u>R</u> edigera	⊻isa Info	ga Foi	rma <u>t</u> Ver	kt <u>yg D</u> ata	a F <u>ö</u> ns	ter <u>H</u> jä	lp						S	Skriv en fråga föl	r hjälp 🔷 👻 💶 d	5 ×
:0	12	Ala	1 1 1 1 1	8 6	12 - 4	1 =) - Σ	• 759	6 🔻	21	Arial			-	10 🗖	F		🔟 • 🖄 • A •	. 2
	1 🔩 🖄 H25		115 81 *	3 By	0a wsv	ara med är	ndringar	Avslut	a gra <u>n</u> ski	ning	-							
	A	В	C	D	E	F	G	Н	I.	J	К	L	M	N	0	P	Q	_
1 2 3	Smar	t Balancing			Language Pressure units: Flow units:	Svenska 💌 kPa l/h	Te	Media: mperature: Date:						Object Obje Mac	Name: ct nr: le by:		Aga	
5		Instrument			W		Sei	ial number:		_				Calibrati	on date:			
7		В	alancing protoco	1	10		Setva	lue	10			M	leasure	ment		1. 16		
8 9	'alre D	Object/System	Name/Place	Valve Type	Size DN	Dp kPa	Flow I/h	Position Turns	Kv	Dp		Flow		Position Turns	Kv	Terminal	Remarks Manual	
10	1	LV1	арр	STAD	DN20	10	900	2,5	2,5	_								_
12	3	L'1	арр	STAD	DN20	10	700	2	1,9									-
13	4						3000											=
14	5						3500	-		_						-		- 1
16			1				0000											-
17																		
18			1	-						_								_
20	_																	-
21			1		-											1		×
M	4 F H	<															>	145
Klar														Ī			NUM	1

State relevant Balancing project information, it could be complete as for ID 1-3 in the above example or parts of information as for ID 4-6.

The information is obtained from the installation documentation and drawings.

<u>Valve ID must always be noted</u>. Always start at the top line, line 10. Click at File and Save at the Excel tool bar, and the Project is stored in the Projects folder.



Set Value & Balancing Projects



Synchronize your Hand Terminal with your PC. Instructions are available in "Getting Started".

Tap on the right Sync Icon (PC to Hand Terminal). Select and mark the Project that is to be transferred to the Hand Terminal. Tap on Open and the Balancing Project information (Set-Values) in your PC is transferred to your Hand Terminal.

Open the BalanceFlex program in your Hand Terminal.



Set Value & Balancing Projects



At the lower part of the screen to the right, among the quick reference lcons, there is a red Project icon.

Tap the icon, select Project and the Valve ID numbers that earlier were transferred to the Handterminal are now seen (1). Tapping on a Valve ID number gives the info re the individual valve. (2). Close the presentation window by tapping on OK at the upper right corner.

If this presentation window is opened at "Choose Valve" menu, under "Measuring Method 1", a "Valve Input" button is shown (3).

If information about Valve Model, Size and position has been transferred to the terminal, tap on the "Valve Input" button and the data is automatically transferred to the "Choose Valve" menu (4).

Continue to "Measurement".



Set Value & Balancing Projects



There are two scroll buttons under the "End" button.

Choose Project and Valve ID. Use the "step up & step down" button to move the cursor. Stored Set-Values for flow, position, DP, and Kv is shown in the blue area to the left. (1)

Adjust the valve to the right flow and tap on "Save". Valve ID and Project name are write protected and automatically transferred to the "Save As" menu (2). At the "Save As" menu you may under "Remarks" do further notes with the Hand Terminal keyboard (3). The measurement is stored at the "Valve Data" menu at the "Main menu" and is stated with "Project_ID" denomination.

When the commissioning is completed, synchronize the Hand Terminal with your PC and open the PC program "Report Viewer".



Set Value & Balancing Projects

Report Viewer				
Create Project 💡	🞐 Open Project 👻 💦 Report	🛓 Print 🗡 Delete 🔒	- 1 💁 🕖	
New Folder 1	Ø DRV_	1 den 15 septem	ber 2007 09:	39:07
	Tillverkare:	Stabiflo		
	Modell:	taraudé		
	Storlek:	DN20		
	Flöde	l/h	862.74	
DRV_1	Differential	kPa	10.06	
	Position		6.8	
	KV värde		2.72	
DRV_6	Statiskt tryck	bar	0.49	
	Temperatur	°C	25.6	
Done	1			

Tap on the left Sync button, Hand Terminal to PC (1). Choose "Category name" in the "Presentation" menu to the left at the top bar (2)

<u>Tap the green Excel icon</u> to open the complete Balance Excel Report with measurements and remarks.



Set Value & Balancing Projects

Come 1	1.44	mager 1944	New York Street of	ai ai														-169	
-	Micro	soft Exc	el - DRV	.xls															K
	Arkiv	<u>R</u> edigera	⊻isa Info	ga For	ma <u>t</u> Ver	kt <u>yg D</u> at	a F <u>ö</u> n:	ster <u>H</u> jä	lp							Skriv en fråga fö	ir hjälp 💿 👻 💶	8 :	×
E		alan	489 69	X PS	A . 1	12 - 14	- 5	75%	-	" : Ar	ial			v 10	T F		100 - A - A	-	**
			0 V H30	00	•••• •	A CONTRACTOR OF THE	-	1070			icar)		_	10				<u> </u>	Ŧ
	222	1 🖸 🧒 🖄	D &	2 🗄 🛛	🖻 🖤 Sv	ara med ä	ndringal	Avslut	ta grans	skning	-								
	G16	-	fx								-								
	A	В	С	D	E	F	G	н	Ĩ.	J	K	4	M	N	0	P	Q	-	_
1	Smar	t Balancing			Språk:	Svenska 🔻		Media:						Anläg	gning:		DRV		^
2	000			19	Tryck enhet:	kPa		Temperatur:			_		_	Obje	kt nr:			_	
3					Flodes enhet:	Im		Datum:			T I	-	-	Uttor	d av: Ismetod:		1		
5		Instrument:					Se	erienummer:						Kalibrerin	gsdatum:		1	-	-
6											11								
7	11. 11	tatility and some lacking	Protokoll	11.01	0 I.I.	00	Börva	irden	Ma		2	F12.4.	Mätr	ning	14.	A	the state and		
9	ID	eqanar rumroble	Mamniplacs	Modell	DN	kPa	/h	Position Vary	~ *			riode		Varv	NV	Från Terminal	För Hand		
10	1	LV1	apprum	taraudé	DN20	10	800	6	2,1	10,06	kPa	862,74	l/h	6,8	2,72				
11	2	LV1	apprum	taraudé	DN20	10	600	6	2,1	10,53	kPa	603,709	l/h	5,6	1,86				
12	3	LV1	apprum	taraudé	DN20	5	400	5,6	1,86	9,6	kPa	396,567	1/h	4,4	1,28			_	
13	4			taraude	DN32		2000			15,59	kPa kPa	2033,443	1/h	5,6	5,15			-	
15	6			taraudé	DN40		3500			15,19	kPa	3702,649	1/h	6.2	9.5		1		
16								1		10110									
17																			
18											-		-					_	
19											-	-	-				1	-	
21																	1		
22																			
23						2													
24											-		-						
25													-					-	
27											1.1								v
H	4 + +	<		1.1				1			1 1		1					>	-
Klar		1.1															NIM		
COL														-	_		1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.	_	2.97

Set Value & Balancing Projects

🖉 Report Viewer				
🔲 🕶 🏢 Create Project 💋	🛚 Open Project 👻 🔀 Rej	port 🛓 Print ズ Delete 🕌 🛃	· 😼 🋃	
New Folder 1 		/_1 den 15 septem	ber 2007 09:39:07	
ica1	Tillverkare:	Stabiflo		
- ica_2	Modell:	taraudé		-
🕼 ica_3 🗌 🌆 ica_4	Storlek:	DN20		
■ New Folder New Folder 2 ■ 2 DRV	Flöde	l/h	862.74	
	Differential	kPa	10.06	
	Position		6.8	
- ፼@ DRV_4	KV värde		2.72	
DRV_6	Statiskt tryck	bar	0.49	
	Temperatur	°C	25.6	~
Done				

Tag the individual measurements.

Click at Report to create a Non-Project Balancing report without any set values.

Click right at the Folder window to create a new folder or a sub folder.

Tag the individual measurements; Click and drag to move the valve package to another folder.



35

Set Value & Balancing Projects

	Nicro	soft Exc	el - rep	ort.xl	s [Skr	ivskyd	dad]												×
N	Arkiv	<u>R</u> edigera	⊻isa Infoq	ga Fori	ma <u>t</u> Verl	kt <u>yg D</u> at	a F <u>ö</u> ns	ster <u>H</u> jä	lp							Skriv en fråga fo	ir hjälp 🚽 🗸	. 8	×
En		ALAR	ABS 69	X ES	R - 3	¥) • (¥	- Σ ·	75%	Ţ	··· · Ari	al			v 10	- F		1 III - 3 - A		
1.00	den ste									5	10		_					•)	7
		1 2 10 2	1001	V 🔁 🛛	a 725v	ara med <u>a</u>	ndringar	Avslut	a gra <u>n</u> s	kning	7								
_	122		Jx C	D	c	F	6	<u> </u>		L I		1	54	N	0	P	0	- 1	_
1	Smar	Ralancing		0	Soråk	Svenska 🔻	ч	Media	- N/		N			Anião	anina:			-	^
2	Jindi	Datationity			Tryck enhet:	kPa	1	Femperatur:						Obje	kt nr:				
3	000				Flödes enhet:	lłh		Datum:		0			_	Utför	d av:				
4		Instrument:	6				Se	rienummer:						Kalibrerin	gsmetoa: asdatum:			_	
6																			
7	W	latišnat rumlohia	Protokoll	Quel	Charlet	DP.	Börva	irden De sitisse	- Vu	DR		Fläde	Mätr	ning	No.	(income)	Sekologaa		
9	Ventii ID	eqanar unrobje	Manninplacs	Modell	DN	kPa	l/h	Varv	<u>.</u>	85		Flode		Varv	N 9	Från Terminal	För Hand		
10	DRV_1				-					10,06	kPa	862,74	1/h	6,8	2,72			-	
11	DRV_2									10,53	kPa LD.	603,709 200 EC7	l/h	5,6	1,86				
12	DBV 4									3,6	kPa	2033 443	Wh	5.6	5.15				
14	DRV_5									15,71	kPa	3052,44	lłh	5,6	7,7				
15	DRV_6									15,19	kPa	3702,649	₩h	6,2	9,5				
16													_						
17													-						
19													-		-				
20																			
21								-										1	
22										<u></u>									
23						-							-	-				-	
25													-		-				
26																			
27																			
28													_	_					v
29		Ne.											1				1	>	-
Klar		1.1.200															NUM		
NIGE																	DWPC1		1999



Set Value & Balancing Projects

Utskriftsformat	? 🗙
Sida Marginaler Sidhuvud/sidfot Blad Orientering Image: State and	Skriv <u>u</u> t Eörhandsgranska Alternati <u>v</u>
Pappersstorlek: A4	/
Utskrifts <u>k</u> valitet: 300 dpi	/
Börja sidnumrera från: Automatisk	
ОК	Avbryt

Click at "File" followed by transcription format.

Choose "Landscape" and reduce the transcription size into a regular A4sheet print out.



Set Value & Balancing Projects

Microsoft ActiveSync	🔋 Mobil enhet 📃 🗖 🗙
Arkiv Visa Verktyg Hjälp	Arkiv Redigera Visa Favoriter Verktyg Hjälp 🥼
🔕 Synkronisera 🕑 Schema 🔯 Utforska	Sakât 🔹 🕥 🛛 🏂 🔎 Sök 📂 Mappar 🛄 🔹
Gäst	Mappaktiviteter
Ansluten	Image Byt namn på den här mappen Image Privates Image Byt namn på den här mappen Image Privates Image Flytta den här mappen Image Privates Image Kopiera den här Image Privates Image Kopiera den
Informationstyp Status	mappen
	Andra platser
	 Den här datorn Mina dokument Delade dokument
	1 markerat/markerade o 🛛 🚺 Mobil enhet 💡



The simplest way to delete finalized measurements and projects that has been transferred and saved at Report Viewer for PC, is via synchronization of the Hand Terminal with PC. Tap at Explore followed by Valve Data. Mark all measurements and tap on delete. Tap the "Set-Value" folder, mark all the projects and tap on delete.

Using several Measuring Sensors.

A great advantage of the PFM Flex 4 is the possibility of using several Sensors and one Hand Terminal. This might be the case when balancing via a partner valve.

Connect and start the Measuring Sensors with the valves you want to balance (according to 3.1). Start the Hand Terminal as earlier described and do the settings. Under the Browser-tag you will notice a 4-digit number for each Sensor as the Hand Terminal is connected with (via Bluetooth). If two Sensors are running, two different 4 digit numbers are displayed, one for each Sensor. Choosing the respective Sensor is done by "ticking" the Sensor that you for the moment would like to receive data from. Click OK up right and continue as earlier. When you would like to receive data from the alternative Sensor, go back to Browser and tick the alternative number and continue as above. You will always have the control of which Sensor you are using as the corresponding serial number is displayed up left on the main menu of the BalanceFlex program. The 4 last digits of the serial number are the same as displayed in Browser.

When a complete PFM Flex 4 is supplied, the Sensor's 4 last digits of the serial number is always pre-set as *Device* number in the *Browser* list. This is indicated by a tick in the "Device square" as well as in *Auto connect* (Auto connection is performed to a ticked device).

The Bluetooth Browser can also be activated manually by tapping *Refresh*. An active icon indicates that "browsing" is in progress. If *Auto Connect* is "un-ticked" tap *Refresh* to start search of Bluetooth devices manually.

Switchmode

Click at "Settings" at the main menu and then choose Browser. Tag the box with Sensor:1 ID number and then tap OK. Choose Method 1 and valve, continue to the measurement menu. Adjust the flow and then tap the Switchmode icon.

	Balance Bluetooth Browser	# # 4 € 03:06 ok
	Device	Address
ł	PC164812809018	00:50:f2:e8:28:88 00:0b:ce:04:9e:19
	0023	00:0b:ce:04:9e:1a
ABSOLUT	Appearance Browser	Valve Data License

Balance easurement	
Flov	w, l/h: 486.222
DiffPressure	e, kPa: <mark>7.27</mark>
PC	osition: 5.50
	KV: 1.80
Static pressure	e, bar: U.UU
Power.	Watt: 0.00
] Stabilize	Save
200023	End
A, STV 20, 5.5/1.80	Manual
	1
dP Fl 🥖 👎	🎯 🧔 💋 👘

Switchmode

Tag the box with the Sensor:2 ID number and then tap OK. Choose valve, continue to the measurement menu. Adjust the flow and then tap the Switchmode icon.

Balance Bluetooth Browser	‡ ‡ 4 € 02:50 ol
PC164812809018 0073 0023 Reset	00:50:f2:e8:28:88 00:0b:ce:04:9e:19 00:0b:ce:04:9e:1a

Switchmode

The Bluetooth communication is automatically switched from Sensor:2 and back to the Sensor:1 measurement menu. Make further adjustments if necessary at Sensor:1 and switch back to Sensor:2.

M e Phtc Balance 📰 📢 02:57 7-Switch sensor 1 Connecting to bluetooth device '0023'... Cancel A dP FI 🔜 🧔 ⊅

7, 8 Hand Terminals and accessories.

7. Using several Hand Terminals.

Any Hand Terminal having the BalanceFlex Measuring program downloaded may use the same Sensor. This might be advantageous in an organization comprised by operators having their own Hand Terminals. The condition is however that each Hand Terminal really has the BalanceFlex program and a valid license.

For additional licenses please contact the supplier.

Smart Balancing offers extra accessories and parts. Please see our website <u>www.smartbalancing.com</u> for information.

9, 10 Upgrading and calibration.

9. Upgrading.

The Hand Terminal is a PPC (Personal Pocket Computer). As such it is programmed with data of most of the existing balancing valves on the market. The same data is also stored on the Smart Balancing CD; *Support, Valve Data.*

If you need to complete your Hand Terminal with data of valves that have been launched after your reception of Hand Terminal, we kindly ask you to contact us.

10. Calibration.

The EU has issued instructions and recommendations for calibration of this kind of instruments. On the Measuring Sensor there is a label indicating when the Instrument was calibrated last time and when it should be calibrated the next time. According to the AMA code, the date of calibration is to be mentioned in all balancing reports. Smart Balancing Instrument AB has of course the organisation to effect the necessary calibration as well as any other service of the instruments. Please also see Warranty and Service.

11. Warranty & Service

Smart Balancing Instrument AB offers up to 5 years warranty on Sensor. The condition for getting the benefit of the five years warranty is that the instrument is sent annually to Smart Balancing Instrument AB for necessary calibrations.

Our warranty conditions.

The warranty is valid for defects in construction, material or manufacture. During the warranty period, Smart Balancing Instrument AB undertake to remedy eventual defects by repair or exchange of product. In connection to such undertakings, the customer pays freight to Smart Balancing Instrument AB and Smart Balancing Instrument pays freight back to customer.

The warranty is valid on condition that:

- the defect has been reported to Smart Balancing Instrument AB
- purchase receipt or equal is enclosed
- the defect is not caused by negligence or erroneous/abnormal usage
- the defect is not caused by normal wear
- the instrument or parts of it have not been dismantled by a not authorized workshop

Smart Balancing Instrument AB is not responsible for resulting damages that could occur as a consequence of an instrument function that has failed to appear.

The warranty does not comprise consumer goods such as batteries etc.

For service or/and calibration please send instrument to::

Smart Balancing Instrument SBI AB Cedersdalsvägen 11 SE-186 40 Vallentuna Att: Mr Jan Hämäläinen Tel: +46 8 – 514 306 91 e-mail: service@smartbalancing.com

Copyright © 2005 All rights reserved. Microsoft, Windows Mobile, are trademarks of Microsoft Corporation registered in United States and/or other countries. The BLUETOOTH trademarks are owned by Bluetooth SIG, Inc., U.S.A.